


CAMBIO DE PILA / CHANGE OF BATTERY / CHANGEMENT DE PILE / CAMBIO DELLA BATTERIA

Luma Netlock SMINI

1.

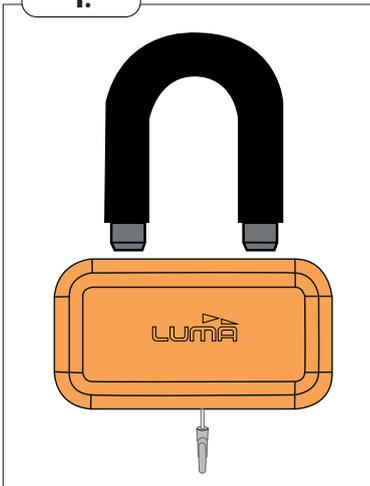

1.

ES Abra el candado para quitar el arco.


GB Open the lock to remove the handle.

FR Ouvrez le antivol pour retirer l'arc..

IT Apri il lucchetto per rimuovere l'arco.

Lorem ipsum

2.

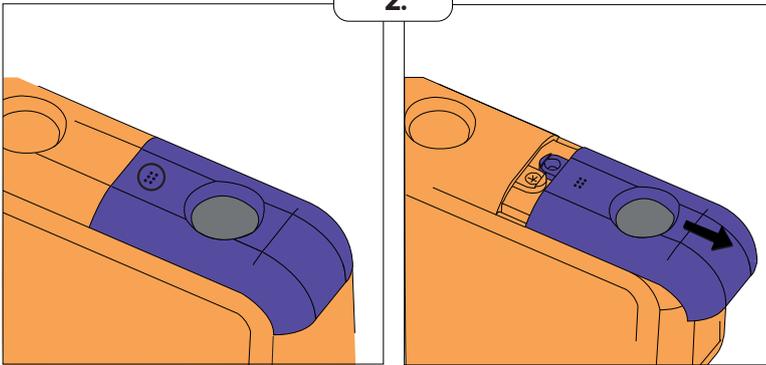

2.

ES Deslice la tapa marcada con salientes.

GB Slide the cover marked with outgoing.

FR Faites glisser le couvercle marqué avec des saillies.

IT Far scorrere il coperchio contrassegnato con sporgenze.



ES Asegúrese de poner correctamente la pila. En caso de duda puede encontrar los símbolos detrás de la tapa superior.

GB Be sure to put the battery correctly. In case of doubt you can find the symbols behind of the top cover

FR Assurez-vous de mettre la batterie correctement. En cas de doute, vous pouvez trouver les symboles derrière du capot supérieur.

IT Assicurati di mettere la batteria correttamente. In caso di dubbio puoi trovare i simboli dietro della copertina superiore

